



Laser Barcode Scanning Setup

| BASIC SETUP INSTRUCTIONS | | |
|---|---|---|
| Navigate to the Barcode Page | From the main page press > STATION SETUP (<i>Button</i>) <i>If prompted for password; press OK.</i> > BARCODE (<i>Tab</i>) |  <p>Buttons are generally found in the main window and perform various tasks such as 'Learn Code'.</p> <p>Tabs are found across the top of most pages and are links to other pages.</p> |
| Input the Start scan & Stop scan dimensions | From the pharmacode page > Select the START SCAN field (<i>Field</i>) > Input the dimension > Select the END SCAN field (<i>Field</i>) > Input the dimension > SAVE CHANGES (<i>Button</i>) |  <p>These settings tell the controller where the code is positioned on the glue flap. Please allow 10mm either side of the barcode when setting these dimensions.</p> <p>Fields are areas (spaces) which require a setting to be input.</p> |